Released by Doc Control 5-25-2022

EU Declaration of Conformity

Manufacturer

Otto Bock HealthCare, LP 3820 West Great Lakes Drive Salt Lake City, Utah 84120-7205 USA

SRN: US-MF-000019567

Authorised Representative

Ottobock SE & Co. KGaA Max-Näder-Straße 15 D-37115 Duderstadt, Germany

SRN: DE-AR-000016531

The signatory, who represents the below-mentioned manufacturer,

Manufacturer

Otto Bock HealthCare, LP 3820 West Great Lakes Drive Salt Lake City, Utah 84120-7205 USA

herewith declares under his sole responsibility that the product

Product

1C50 Taleo

Risk class I according to Regulation (EU) 2017/745 Basic UDI-DI: 1C50: 406440900000000001C50RM

2C15: 4064409000000000002C15RS

	in the following variants	
	Variants	
Taleo	1C50=L24-1-P/0	
Taleo	1C50=L24-1-70	
Taleo	1C50=L24-3-P/0	
Taleo	1C50=L24-4-P/0	
Taleo	1C50=L24-5-P/0	
Taleo	1C50=L24-6-P/0	
Taleo	1C50=R24-1-P/0	
Taleo	1C50=R24-2-P/0	
Taleo	1C50=R24-3-P/0	
Taleo	1C50=R24-4-P/0	
Taleo	1C50=R24-5-P/0	
Taleo	1C50=R24-6-P/0	
Taleo	1C50=L25-1-P/0	
Taleo	1C50=L25-2-P/0	
Taleo	1C50=L25-3-P/0	
Taleo	1C50=L25-4-P/0	
Taleo _	1C50=L25-5-P/0	
Taleo	1C50=L25-6-P/0	
Taleo	1C50=L25-7-P/0	
Taleo	1C50=R25-1-P/0	
Taleo	1C50=R25-2-P/0	
Taleo	1C50=R25-3-P/0	
Taleo	1C50=R25-4-P/0	2
Taleo	1C50=R25-5-P/0	,
Taleo	1C50=R25-6-P/0	
Taleo	1C50=R25-7-P/0	
Taleo	1C50=L26-1-P/0	
Taleo	1C50=L26-2-P/0	
Taleo	1C50=L26-3-P/0	
Taleo	1C50=L26-4-P/0	
Taleo	1C50=L26-5-P/0	
Taleo	1C50=L26-6-P/0	
Taleo	1C50=L26-7-P/0	
Taleo	1C50=L26-8-P/0	
Taleo	1C50=R26-1-P/0	
Taleo	1C50=R26-2-P/0	
Taleo	1C50=R26-3-P/0	1
Taleo	1C50=R26-4-P/0	
Taleo	1C50=R26-5-P/0	
Taleo	1C50=R26-6-P/0	
Taleo	1C50=R26-7-P/0	
Taleo	1C50=R26-8-P/0	
Taleo	1C50=L27-3-P/0	
Taleo	1C50=L27-4-P/0	

Document reference number: REG-00134 Date: 5/25/2022 Rev: 1 ECO-01862

Taleo	1C50=L27-5-P/0
Taleo	1C50=L27-6-P/0
Taleo	1C50=L27-7-P/0
Taleo	1C50=L27-8-P/0
Taleo	1C50=L27-9-P/0
Taleo	1C50=R27-3-P/0
Taleo	1C50=R27-4-P/0
Taleo	1C50=R27-5-P/0
Taleo	1C50=R27-6-P/0
Taleo	1C50=R27-7-P/0
Taleo	1C50=R27-8-P/0
Taleo	1C50=R27-9-P/0
Taleo	1C50=L28-3-P/0
Taleo	1C50=L28-4-P/0
Taleo	1C50=L28-5-P/0
Taleo	1C50=L28-6-P/0
Taleo	1C50=L28-7-P/0
Taleo	1C50=L28-8-P/0
Taleo	1C50=L28-9-P/0
Taleo	1C50=R28-3-P/0
Taleo	1C50=R28-4-P/0
Taleo	1C50=R28-5-P/0
Taleo	1C50=R28-6-P/0
Taleo	1C50=R28-7-P/0
Taleo	1C50=R28-8-P/0
Taleo	1C50=R28-9-P/0
Taleo	1C50=L24-1-P/4N
Taleo	1C50=L24-2-P/4N
Taleo	1C50=L24-3-P/4N
Taleo	1C50=L24-4-P/4N
Taleo	1C50=L24-5-P/4N
Taleo	1C50=L24-6-P/4N
Taleo	1C50=R24-1-P/4N
Taleo	1C50=R24-2-P/4N
Taleo	1C50=R24-3-P/4N
Taleo	1C50=R24-4-P/4N
Taleo	1C50=R24-5-P/4N
Taleo	1C50=R24-6-P/4N
Taleo	1C50=L25-1-P/4N
Taleo	1C50=L25-2-P/4N
Taleo	1C50=L25-3-P/4N
Taleo	1C50=L25-4-P/4N
Taleo 	1C50=L25-5-P/4N
Taleo	1C50=L25-6-P/4N
Taleo	1C50=L25-7-P/4N
Taleo	1C50=R25-1-P/4N

1862		
Taleo	1C50=R25-2-P/4N	
Taleo	1C50=R25-3-P/4N	
Taleo	1C50=R25-4-P/4N	
Taleo	1C50=R25-5-P/4N	
Taleo	1C50=R25-6-P/4N	
Taleo	1C50=R25-7-P/4N	
Taleo	1C50=L26-1-P/4N	
Taleo	1C50=L26-2-P/4N	
Taleo	1C50=L26-3-P/4N	
Taleo	1C50=L26-4-P/4N	
Taleo	1C50=L26-5-P/4N	
Taleo	1C50=L26-6-P/4N	
Taleo	1C50=L26-7-P/4N	
Taleo	1C50=L26-8-P/4N	
Taleo	1C50=R26-1-P/4N	,
Taleo	1C50=R26-2-P/4N	
Taleo	1C50=R26-3-P/4N	
Taleo	1C50=R26-4-P/4N	
Taleo	1C50=R26-5-P/4N	
Taleo	1C50=R26-6-P/4N	
Taleo	1C50=R26-7-P/4N	
Taleo	1C50=R26-8-P/4N	
Taleo	1C50=L27-3-P/4N	
Taleo	1C50=L27-4-P/4N	
Taleo	1C50=L27-5-P/4N	
Taleo	1C50=L27-6-P/4N	
Taleo	1C50=L27-7-P/4N	
Taleo	1C50=L27-8-P/4N	
Taleo	1C50=L27-9-P/4N	
Taleo	1C50=R27-3-P/4N	
Taleo	1C50=R27-4-P/4N	
Taleo	1C50=R27-5-P/4N	
Taleo	1C50=R27-6-P/4N	
Taleo	1C50=R27-7-P/4N	
Taleo	1C50=R27-8-P/4N	
Taleo	1C50=R27-9-P/4N	
Taleo	1C50=L28-3-P/4N	
Taleo	1C50=L28-4-P/4N	
Taleo	1C50=L28-5-P/4N	
Taleo	1C50=L28-6-P/4N	
Taleo	1C50=L28-7-P/4N	
Taleo	1C50=L28-8-P/4N	
Taleo	1C50=L28-9-P/4N	
Taleo	1C50=R28-3-P/4N	A.
Taleo	1C50=R28-4-P/4N	
Taleo	1C50=R28-5-P/4N	
Taico	1000-1120 0 1 7-114	

л	
~	
Œ	
-	
ന	
22	
ш	
S	
The second	
Ų.	
Q	
$\overline{\circ}$	
۳,	
_	
\simeq	
0	
0	
**	
\circ	
()	
0	
=	
_	
~	
0	
_	
CT	
Ų٠	
- 6.5	
10	
C	
٦.	
N S	
12	
0	
N)	
12	
\sim	

Taleo	1C50=R28-6-P/4N	
Taleo	1C50=R28-7-P/4N	
Taleo	1C50=R28-8-P/4N	
Taleo	1C50=R28-9-P/4N	
Taleo	1C50=L24-1-P/4S	
Taleo	1C50=L24-2-P/4S	
Taleo	1C50=L24-3-P/4S	
Taleo	1C50=L24-4-P/4S	
Taleo	1C50=L24-5-P/4S	
Taleo	1C50=L24-6-P/4S	
Taleo	1C50=R24-1-P/4S	
Taleo	1C50=R24-2-P/4S	
Taleo	1C50=R24-3-P/4S	
Taleo	1C50=R24-4-P/4S	
Taleo	1C50=R24-5-P/4S	
Taleo	1C50=R24-6-P/4S	
Taleo	1C50=L25-1-P/4S	
Taleo	1C50=L25-2-P/4S	
Taleo	1C50=L25-3-P/4S	
Taleo	1C50=L25-4-P/4S	
Taleo	1C50=L25-5-P/4S	
Taleo	1C50=L25-6-P/4S	
Taleo	1C50=L25-7-P/4S	
Taleo	1C50=R25-1-P/4S	
Taleo	1C50=R25-2-P/4S	
Taleo	1C50=R25-3-P/4S	
Taleo	1C50=R25-4-P/4S	
Taleo	1C50=R25-5-P/4S	
Taleo	1C50=R25-6-P/4S	
Taleo	1C50=R25-7-P/4S	
Taleo	1C50=L24-1-P/15N	
Taleo	1C50=L24-2-P/15N	
Taleo	1C50=L24-3-P/15N	
Taleo	1C50=L24-4-P/15N	
Taleo	1C50=L24-5-P/15N	
Taleo	1C50=L24-6-P/15N	
Taleo	1C50=R24-1-P/15N	
Taleo	1C50=R24-2-P/15N	
Taleo	1C50=R24-3-P/15N	
Taleo	1C50=R24-4-P/15N	
Taleo	1C50=R24-5-P/15N	
Taleo	1C50=R24-6-P/15N	
Taleo	1C50=L25-1-P/15N	
Taleo	1C50=L25-2-P/15N	
Taleo	1C50=L25-3-P/15N	
Taleo	1C50=L25-4-P/15N	

~	
Œ	
_	
ന	
125	
a	
-	
v	
$\mathbf{\Phi}$	
V	
\circ	
_	
_	
\circ	
_	
\cup	
Do	
0	
()	
_	
\circ	
~ /	
\circ	
\simeq	
\neg	
=	
_	
\sim	
0	
_	
CD	
Ų,	
-3.5	
N	
- 12	
OI	
- 11	
18.5	
- IV	
\sim	
$^{\circ}$	
N 3	
يري	
N)	
. •	

Taleo 1C50=L25-5-P/15N Taleo 1C50=L25-6-P/15N Taleo 1C50=L25-7-P/15N Taleo 1C50=L25-7-P/15N Taleo 1C50=L25-1-P/15N Taleo 1C50=L25-7-P/15N Taleo 1C50=R25-1-P/15N Taleo 1C50=R25-2-P/15N Taleo 1C50=R25-3-P/15N Taleo 1C50=R25-5-P/15N Taleo 1C50=R25-5-P/15N Taleo 1C50=R25-7-P/15N Taleo 1C50=R25-7-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R28-8-P/15N			
Taleo 1C50=R25-7-P/15N Taleo 1C50=R25-2-P/15N Taleo 1C50=R25-2-P/15N Taleo 1C50=R25-2-P/15N Taleo 1C50=R25-2-P/15N Taleo 1C50=R25-2-P/15N Taleo 1C50=R25-2-P/15N Taleo 1C50=R25-8-P/15N Taleo 1C50=R25-8-P/15N Taleo 1C50=R25-8-P/15N Taleo 1C50=R25-8-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-2-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-P/15N Taleo 1C50=L26-P/15N Taleo 1C50=R26-P/15N Taleo 1C50=L27-P/15N Taleo 1C50=R27-P/15N	Taleo	1C50=L25-5-P/15N	
Taleo 1C50=R25-1-P/15N Taleo 1C50=R25-2-P/15N Taleo 1C50=R25-3-P/15N Taleo 1C50=R25-3-P/15N Taleo 1C50=R25-5-P/15N Taleo 1C50=R25-5-P/15N Taleo 1C50=R25-6-P/15N Taleo 1C50=R25-6-P/15N Taleo 1C50=R25-7-P/15N Taleo 1C50=R25-7-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-2-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-2-P/15N Taleo 1C50=R26-2-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-8-P/15N	Taleo	1C50=L25-6-P/15N	
Taleo 1C50=R25-3-P/15N Taleo 1C50=R25-3-P/15N Taleo 1C50=R25-3-P/15N Taleo 1C50=R25-5-P/15N Taleo 1C50=R25-5-P/15N Taleo 1C50=R25-6-P/15N Taleo 1C50=R25-6-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-2-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-8-P/15N	Taleo	1C50=L25-7-P/15N	
Taleo 1C50=R25-3-P/15N Taleo 1C50=R25-4-P/15N Taleo 1C50=R25-5-P/15N Taleo 1C50=R25-6-P/15N Taleo 1C50=R25-7-P/15N Taleo 1C50=R25-7-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-4-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-4-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=R27-3-P/15N	Taleo	1C50=R25-1-P/15N	
Taleo 1C50=R25-4-P/15N Taleo 1C50=R25-6-P/15N Taleo 1C50=R25-6-P/15N Taleo 1C50=R25-7-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-4-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-4-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=R27-3-P/15N	Taleo	1C50=R25-2-P/15N	
Taleo 1C50=R25-5-P/15N Taleo 1C50=R25-5-P/15N Taleo 1C50=R25-7-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-2-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-5-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-8-P/15N	Taleo	1C50=R25-3-P/15N	
Taleo 1C50=R25-6-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-2-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R28-3-P/15N Taleo 1C50=R28-3-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N	Taleo	1C50=R25-4-P/15N	
Taleo 1C50=R25-7-P/15N Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-2-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-4-P/15N Taleo 1C50=L26-5-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-4-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-3-P/15N	Taleo	1C50=R25-5-P/15N	
Taleo 1C50=L26-1-P/15N Taleo 1C50=L26-2-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-4-P/15N Taleo 1C50=L26-4-P/15N Taleo 1C50=L26-5-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-5-P/15N Taleo 1C50=R26-5-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-6-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N	Taleo	1C50=R25-6-P/15N	
Taleo 1C50=L26-2-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-4-P/15N Taleo 1C50=L26-5-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-2-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-8-P/15N	Taleo	1C50=R25-7-P/15N	
Taleo 1C50=L26-3-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-5-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=L28-8-P/15N Taleo 1C50=L28-8-P/15N	Taleo	1C50=L26-1-P/15N	
Taleo 1C50=L26-4-P/15N Taleo 1C50=L26-5-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-4-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-7-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-5-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=L28-8-P/15N	Taleo	1C50=L26-2-P/15N	
Taleo 1C50=L26-5-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-2-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-6-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-8-P/15N	Taleo	1C50=L26-3-P/15N	
Taleo 1C50=L26-6-P/15N Taleo 1C50=L26-7-P/15N Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-2-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-5-P/15N Taleo 1C50=R26-5-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-7-P/15N Taleo 1C50=R26-7-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-9-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N	Taleo	1C50=L26-4-P/15N	
Taleo 1C50=L26-7-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-2-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-4-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-6-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-9-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R28-3-P/15N Taleo 1C50=L28-3-P/15N	Taleo	1C50=L26-5-P/15N	
Taleo 1C50=L26-7-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-2-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-4-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-6-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-9-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-5-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N	Taleo	1C50=L26-6-P/15N	
Taleo 1C50=L26-8-P/15N Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-2-P/15N Taleo 1C50=R26-2-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-4-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-7-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-6-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=L28-3-P/15N			
Taleo 1C50=R26-1-P/15N Taleo 1C50=R26-2-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-4-P/15N Taleo 1C50=R26-5-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-4-P/15N			
Taleo 1C50=R26-2-P/15N Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-4-P/15N Taleo 1C50=R26-5-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-6-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N			
Taleo 1C50=R26-3-P/15N Taleo 1C50=R26-4-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-7-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-6-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-9-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-4-P/15N			
Taleo 1C50=R26-4-P/15N Taleo 1C50=R26-5-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-6-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-9-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-5-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-4-P/15N			
Taleo 1C50=R26-5-P/15N Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-7-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-5-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-5-P/15N		1C50=R26-4-P/15N	
Taleo 1C50=R26-6-P/15N Taleo 1C50=R26-7-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-6-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-9-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-5-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-5-P/15N			
Taleo 1C50=R26-R-P/15N Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-9-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-5-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-5-P/15N		1C50=R26-6-P/15N	
Taleo 1C50=R26-8-P/15N Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-6-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-9-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-5-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-5-P/15N		1C50=R26-7-P/15N	
Taleo 1C50=L27-3-P/15N Taleo 1C50=L27-4-P/15N Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-6-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-9-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-5-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-5-P/15N		1C50=R26-8-P/15N	
Taleo 1C50=L27-5-P/15N Taleo 1C50=L27-6-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-5-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-5-P/15N		1C50=L27-3-P/15N	
Taleo 1C50=L27-6-P/15N Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-5-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-5-P/15N	Taleo	1C50=L27-4-P/15N	
Taleo 1C50=L27-7-P/15N Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-9-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-5-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-9-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-5-P/15N	Taleo	1C50=L27-5-P/15N	
Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-9-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-5-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-5-P/15N	Taleo	1C50=L27-6-P/15N	
Taleo 1C50=L27-8-P/15N Taleo 1C50=L27-9-P/15N Taleo 1C50=R27-3-P/15N Taleo 1C50=R27-4-P/15N Taleo 1C50=R27-5-P/15N Taleo 1C50=R27-6-P/15N Taleo 1C50=R27-7-P/15N Taleo 1C50=R27-8-P/15N Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-5-P/15N	Taleo	1C50=L27-7-P/15N	2
Taleo1C50=R27-3-P/15NTaleo1C50=R27-4-P/15NTaleo1C50=R27-5-P/15NTaleo1C50=R27-6-P/15NTaleo1C50=R27-7-P/15NTaleo1C50=R27-8-P/15NTaleo1C50=R27-9-P/15NTaleo1C50=L28-3-P/15NTaleo1C50=L28-4-P/15NTaleo1C50=L28-5-P/15N	Taleo	1C50=L27-8-P/15N	
Taleo1C50=R27-4-P/15NTaleo1C50=R27-5-P/15NTaleo1C50=R27-6-P/15NTaleo1C50=R27-7-P/15NTaleo1C50=R27-8-P/15NTaleo1C50=R27-9-P/15NTaleo1C50=L28-3-P/15NTaleo1C50=L28-4-P/15NTaleo1C50=L28-5-P/15N	Taleo	1C50=L27-9-P/15N	
Taleo1C50=R27-5-P/15NTaleo1C50=R27-6-P/15NTaleo1C50=R27-7-P/15NTaleo1C50=R27-8-P/15NTaleo1C50=R27-9-P/15NTaleo1C50=L28-3-P/15NTaleo1C50=L28-4-P/15NTaleo1C50=L28-5-P/15N	Taleo	1C50=R27-3-P/15N	
Taleo1C50=R27-6-P/15NTaleo1C50=R27-7-P/15NTaleo1C50=R27-8-P/15NTaleo1C50=R27-9-P/15NTaleo1C50=L28-3-P/15NTaleo1C50=L28-4-P/15NTaleo1C50=L28-5-P/15N	Taleo	1C50=R27-4-P/15N	
Taleo1C50=R27-7-P/15NTaleo1C50=R27-8-P/15NTaleo1C50=R27-9-P/15NTaleo1C50=L28-3-P/15NTaleo1C50=L28-4-P/15NTaleo1C50=L28-5-P/15N	Taleo	1C50=R27-5-P/15N	
Taleo1C50=R27-8-P/15NTaleo1C50=R27-9-P/15NTaleo1C50=L28-3-P/15NTaleo1C50=L28-4-P/15NTaleo1C50=L28-5-P/15N	Taleo	1C50=R27-6-P/15N	
Taleo1C50=R27-9-P/15NTaleo1C50=L28-3-P/15NTaleo1C50=L28-4-P/15NTaleo1C50=L28-5-P/15N	Taleo	1C50=R27-7-P/15N	
Taleo1C50=R27-9-P/15NTaleo1C50=L28-3-P/15NTaleo1C50=L28-4-P/15NTaleo1C50=L28-5-P/15N		1C50=R27-8-P/15N	
Taleo 1C50=L28-3-P/15N Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-5-P/15N		1C50=R27-9-P/15N	
Taleo 1C50=L28-4-P/15N Taleo 1C50=L28-5-P/15N		1C50=L28-3-P/15N	
Taleo 1C50=L28-5-P/15N		1C50=L28-4-P/15N	
		1C50=L28-5-P/15N	
		1C50=L28-6-P/15N	
Taleo 1C50=L28-7-P/15N			
Taleo 1C50=L28-8-P/15N			

01862		
Taleo	1C50=L28-9-P/15N	
Taleo	1C50=R28-3-P/15N	
Taleo	1C50=R28-4-P/15N	
Taleo	1C50=R28-5-P/15N	
Taleo	1C50=R28-6-P/15N	
Taleo	1C50=R28-7-P/15N	
Taleo	1C50=R28-8-P/15N	
Taleo	1C50=R28-9-P/15N	
Taleo	1C50=L24-1-P/15S	
Taleo	1C50=L24-2-P/15S	
Taleo	1C50=L24-3-P/15S	
Taleo	1C50=L24-4-P/15S	
Taleo	1C50=L24-5-P/15S	
Taleo	1C50=L24-6-P/15S	
Taleo	1C50=R24-1-P/15S	
Taleo	1C50=R24-2-P/15S	
Taleo	1C50=R24-3-P/15S	
Taleo	1C50=R24-4-P/15S	
Taleo	1C50=R24-5-P/15S	
Taleo	1C50=R24-6-P/15S	
Taleo	1C50=L25-1-P/15S	
Taleo	1C50=L25-2-P/15S	
Taleo	1C50=L25-3-P/15S	
Taleo	1C50=L25-4-P/15S	
Taleo	1C50=L25-5-P/15S	
Taleo	1C50=L25-6-P/15S	
Taleo	1C50=L25-7-P/15S	
Taleo	1C50=R25-1-P/15S	
Taleo	1C50=R25-2-P/15S	
Taleo	1C50=R25-3-P/15S	
Taleo	1C50=R25-4-P/15S	
Taleo	1C50=R25-5-P/15S	
Taleo	1C50=R25-6-P/15S	
Taleo	1C50=R25-7-P/15S	
Taleo	1C50=L24-1-P/0-OB	
Taleo	1C50=L24-2-P/0-OB	
Taleo	1C50=L24-3-P/0-OB	
Taleo	1C50=L24-4-P/0-OB	
Taleo	1C50=L24-5-P/0-OB	
Taleo	1C50=L24-6-P/0-OB	
Taleo	1C50=R24-1-P/0-OB	
Taleo	1C50=R24-2-P/0-OB	
Taleo	1C50=R24-3-P/0-OB	
Taleo	1C50=R24-4-P/0-OB	
Taleo	1C50=R24-5-P/0-OB	
Taleo	1C50=R24-6-P/0-OB	

01862	
Taleo	1C50=L25-1-P/0-OB
Taleo	1C50=L25-2-P/0-OB
Taleo	1C50=L25-3-P/0-OB
Taleo	1C50=L25-4-P/0-OB
Taleo	1C50=L25-5-P/0-OB
Taleo	1C50=L25-6-P/0-OB
Taleo	1C50=L25-7-P/0-OB
Taleo	1C50=R25-1-P/0-OB
Taleo	1C50=R25-2-P/0-OB
Taleo	1C50=R25-3-P/0-OB
Taleo	1C50=R25-4-P/0-OB
Taleo	1C50=R25-5-P/0-OB
Taleo	1C50=R25-6-P/0-OB
Taleo	1C50=R25-7-P/0-OB
Taleo	1C50=L26-1-P/0-OB
Taleo	1C50=L26-2-P/0-OB
Taleo	1C50=L26-3-P/0-OB
Taleo	1C50=L26-4-P/0-OB
Taleo	1C50=L26-5-P/0-OB
Taleo	1C50=L26-6-P/0-OB
Taleo	1C50=L26-7-P/0-OB
Taleo	1C50=L26-8-P/0-OB
Taleo	1C50=R26-1-P/0-OB
Taleo	1C50=R26-2-P/0-OB
Taleo	1C50=R26-3-P/0-OB
Taleo	1C50=R26-4-P/0-OB
Taleo	1C50=R26-5-P/0-OB
Taleo	1C50=R26-6-P/0-OB
Taleo	1C50=R26-7-P/0-OB
Taleo	1C50=R26-8-P/0-OB
Taleo	1C50=L27-3-P/0-OB
Taleo	1C50=L27-4-P/0-OB
Taleo	1C50=L27-5-P/0-OB
Taleo	1C50=L27-6-P/0-OB
Taleo	1C50=L27-7-P/0-OB
Taleo	1C50=L27-8-P/0-OB
Taleo	1C50=L27-9-P/0-OB
Taleo	1C50=R27-3-P/0-OB
Taleo	1C50=R27-4-P/0-OB
Taleo	1C50=R27-5-P/0-OB
Taleo	1C50=R27-6-P/0-OB
Taleo	1C50=R27-7-P/0-OB
Taleo	1C50=R27-8-P/0-OB
Taleo	1C50=R27-9-P/0-OB
Taleo	1C50=L28-3-P/0-OB
Taleo	1C50=L28-4-P/0-OB

Document reference number: REG-00134 Date: 5/25/2022 Rev: 1 ECO-01862



Taleo	1C50=L28-5-P/0-OB
Taleo	1C50=L28-6-P/0-OB
Taleo	1C50=L28-7-P/0-OB
Taleo	1C50=L28-8-P/0-OB
Taleo	1C50=L28-9-P/0-OB
Taleo	1C50=R28-3-P/0-OB
Taleo	1C50=R28-4-P/0-OB
Taleo	1C50=R28-5-P/0-OB
Taleo	1C50=R28-6-P/0-OB
Taleo	1C50=R28-7-P/0-OB
Taleo	1C50=R28-8-P/0-OB
Taleo	1C50=R28-9-P/0-OB
Taleo	1C50=L22-1-P/0
Taleo	1C50=L22-2-P/0
Taleo	1C50=L22-3-P/0
Taleo	1C50=L22-4-P/0
Taleo	1C50=L22-5-P/0
Taleo	1C50=R22-1-P/0
Taleo	1C50=R22-2-P/0
Taleo	1C50=R22-3-P/0
Taleo	1C50=R22-4-P/0
Taleo	1C50=R22-5-P/0
Taleo	1C50=L23-1-P/0
Taleo	1C50=L23-2-P/0
Taleo	1C50=L23-3-P/0
Taleo	1C50=L23-4-P/0
Taleo	1C50=L23-5-P/0
Taleo	1C50=L23-6-P/0
Taleo	1C50=R23-1-P/0
Taleo	1C50=R23-2-P/0
Taleo	1C50=R23-3-P/0
Taleo	1C50=R23-4-P/0
Taleo	1C50=R23-5-P/0
Taleo	1C50=R23-6-P/0
Taleo	1C50=L29-4-P/0
Taleo	1C50=L29-5-P/0
Taleo	1C50=L29-6-P/0
Taleo	1C50=L29-7-P/0
Taleo	1C50=L29-8-P/0
Taleo	1C50=L29-9-P/0
Taleo	1C50=R29-4-P/0
Taleo	1C50=R29-5-P/0
Taleo	1C50=R29-6-P/0
Taleo	1C50=R29-7-P/0
Taleo	1C50=R29-8-P/0
Taleo	1C50=R29-9-P/0

Releas
ed k
y D
00 (
Control
5-25-20
22

Taleo	1C50=L30-4-P/0	
Taleo	1C50=L30-5-P/0	
Taleo	1C50=L30-6-P/0	
Taleo	1C50=L30-7-P/0	
Taleo	1C50=L30-8-P/0	
Taleo	1C50=L30-9-P/0	
Taleo	1C50=R30-4-P/0	
Taleo	1C50=R30-5-P/0	
Taleo	1C50=R30-6-P/0	*
Taleo	1C50=R30-7-P/0	
Taleo	1C50=R30-8-P/0	
Taleo	1C50=R30-9-P/0	
Taleo	1C50=L29-4-P/4N	
Taleo	1C50=L29-5-P/4N	
Taleo	1C50=L29-6-P/4N	
Taleo	1C50=L29-7-P/4N	
Taleo	1C50=L29-8-P/4N	
Taleo	1C50=L29-9-P/4N	
Taleo	1C50=R29-4-P/4N	
Taleo	1C50=R29-5-P/4N	
Taleo	1C50=R29-6-P/4N	
Taleo	1C50=R29-7-P/4N	
Taleo	1C50=R29-8-P/4N	
Taleo	1C50=R29-9-P/4N	
Taleo	1C50=L30-4-P/4N	
Taleo	1C50=L30-5-P/4N	
Taleo	1C50=L30-6-P/4N	
Taleo	1C50=L30-7-P/4N	
Taleo	1C50=L30-8-P/4N	
Taleo	1C50=L30-9-P/4N	
Taleo	1C50=R30-4-P/4N	
Taleo	1C50=R30-5-P/4N	
Taleo	1C50=R30-6-P/4N	
Taleo	1C50=R30-7-P/4N	
Taleo	1C50=R30-8-P/4N	
Taleo	1C50=R30-9-P/4N	
Taleo	1C50=L22-1-P/4S	,
Taleo	1C50=L22-2-P/4S	
Taleo	1C50=L22-3-P/4S	
Taleo	1C50=L22-4-P/4S	
Taleo	1C50=L22-5-P/4S	
Taleo	1C50=R22-1-P/4S	
Taleo	1C50=R22-2-P/4S	
Taleo	1C50=R22-3-P/4S	
Taleo	1C50=R22-4-P/4S	
Taleo	1C50=R22-5-P/4S	

1862		
Taleo	1C50=L23-1-P/4S	
Taleo	1C50=L23-2-P/4S	
Taleo	1C50=L23-3-P/4S	
Taleo	1C50=L23-4-P/4S	
Taleo	1C50=L23-5-P/4S	
Taleo	1C50=L23-6-P/4S	
Taleo	1C50=R23-1-P/4S	
Taleo	1C50=R23-2-P/4S	
Taleo	1C50=R23-3-P/4S	
Taleo	1C50=R23-4-P/4S	
Taleo	1C50=R23-5-P/4S	
Taleo	1C50=R23-6-P/4S	
Taleo	1C50=L29-4-P/15N	
Taleo	1C50=L29-5-P/15N	
Taleo	1C50=L29-6-P/15N	
Taleo	1C50=L29-7-P/15N	
Taleo	1C50=L29-8-P/15N	
Taleo	1C50=L29-9-P/15N	
Taleo	1C50=R29-4-P/15N	
Taleo	1C50=R29-5-P/15N	
Taleo	1C50=R29-6-P/15N	
Taleo	1C50=R29-7-P/15N	
Taleo	1C50=R29-8-P/15N	
Taleo	1C50=R29-9-P/15N	
Taleo	1C50=L30-4-P/15N	
Taleo	1C50=L30-5-P/15N	
Taleo	1C50=L30-6-P/15N	
Taleo	1C50=L30-7-P/15N	
Taleo	1C50=L30-8-P/15N	
Taleo	1C50=L30-9-P/15N	
Taleo	1C50=R30-4-P/15N	
Taleo	1C50=R30-5-P/15N	
Taleo	1C50=R30-6-P/15N	
Taleo	1C50=R30-7-P/15N	
Taleo	1C50=R30-8-P/15N	
Taleo	1C50=R30-9-P/15N	
Taleo	1C50=L22-1-P/15S	
Taleo	1C50=L22-2-P/15S	
Taleo	1C50=L22-3-P/15S	
Taleo	1C50=L22-4-P/15S	
Taleo	1C50=L22-5-P/15S	
Taleo	1C50=R22-1-P/15S	-
Taleo	1C50=R22-2-P/15S	
Taleo	1C50=R22-3-P/15S	
Taleo	1C50=R22-4-P/15S	
Taleo	1C50=R22-5-P/15S	

	Released by Doc Control 5-25-2022
	2

Taleo	1C50=L23-1-P/15S
Taleo	1C50=L23-2-P/15S
Taleo	1C50=L23-3-P/15S
Taleo	1C50=L23-4-P/15S
Taleo	1C50=L23-5-P/15S
Taleo	1C50=L23-6-P/15S
Taleo	1C50=R23-1-P/15S
Taleo	1C50=R23-2-P/15S
Taleo	1C50=R23-3-P/15S
Taleo	1C50=R23-4-P/15S
Taleo	1C50=R23-5-P/15S
Taleo	1C50=R23-6-P/15S
Taleo	1C50=L22-1-P/0-OB
Taleo	1C50=L22-2-P/0-OB
Taleo	1C50=L22-3-P/0-OB
Taleo	1C50=L22-4-P/0-OB
Taleo	1C50=L22-5-P/0-OB
Taleo	1C50=R22-1-P/0-OB
Taleo	1C50=R22-2-P/0-OB
Taleo	1C50=R22-3-P/0-OB
Taleo	1C50=R22-4-P/0-OB
Taleo	1C50=R22-5-P/0-OB
Taleo	1C50=L23-1-P/0-OB
Taleo	1C50=L23-2-P/0-OB
Taleo	1C50=L23-3-P/0-OB
Taleo	1C50=L23-4-P/0-OB
Taleo	1C50=L23-5-P/0-OB
Taleo	1C50=L23-6-P/0-OB
Taleo	1C50=R23-1-P/0-OB
Taleo	1C50=R23-2-P/0-OB
Taleo	1C50=R23-3-P/0-OB
Taleo	1C50=R23-4-P/0-OB
Taleo	1C50=R23-5-P/0-OB
Taleo	1C50=R23-6-P/0-OB
Taleo	1C50=L29-4-P/0-OB
Taleo	1C50=L29-4-P/0-OB
Taleo	1C50=L29-5-P/0-OB
Taleo	1C50=L29-0-P/0-OB
Taleo	1C50=L29-8-P/0-OB
Taleo	1C50=L29-9-P/0-OB
Taleo	1C50=R29-4-P/0-OB
Taleo	1C50=R29-5-P/0-OB
Taleo	1C50=R29-6-P/0-OB
Taleo	1C50=R29-7-P/0-OB
Taleo	1C50=R29-8-P/0-OB
Taleo	1C50=R29-9-P/0-OB

ਯ	
~~	
Œ	
_	
Œ	
0)	
20	
S	
m	
*	
_	
σ	
\cup	
0	
\approx	
0	
O	
\sim	
$\underline{\circ}$	
$\boldsymbol{-}$	
_	
_	
0	
15	
OI	
3.0	
\sim	
CD	
ų.	
8.5	
10	
\circ	
~~	
īŲ	
\sim	

Taleo	1C50=L30-4-P/0-OB
Taleo	1C50=L30-5-P/0-OB
Taleo	1C50=L30-6-P/0-OB
Taleo	1C50=L30-7-P/0-OB
Taleo	1C50=L30-8-P/0-OB
Taleo	1C50=L30-9-P/0-OB
Taleo	1C50=R30-4-P/0-OB
Taleo	1C50=R30-5-P/0-OB
Taleo	1C50=R30-6-P/0-OB
Taleo	1C50=R30-7-P/0-OB
Taleo	1C50=R30-8-P/0-OB
Taleo	1C50=R30-9-P/0-OB
Taleo	1C50=L29-4-P/4N-OB
Taleo	1C50=L29-5-P/4N-OB
Taleo	1C50=L29-6-P/4N-OB
Taleo	1C50=L29-7-P/4N-OB
Taleo	1C50=L29-8-P/4N-OB
Taleo	1C50=L29-9-P/4N-OB
Taleo	1C50=R29-4-P/4N-OB
Taleo	1C50=R29-5-P/4N-OB
Taleo	1C50=R29-6-P/4N-OB
Taleo	1C50=R29-7-P/4N-OB
Taleo	1C50=R29-8-P/4N-OB
Taleo	1C50=R29-9-P/4N-OB
Taleo	1C50=L30-4-P/4N-OB
Taleo	1C50=L30-5-P/4N-OB
Taleo	1C50=L30-6-P/4N-OB
Taleo	1C50=L30-7-P/4N-OB
Taleo	1C50=L30-8-P/4N-OB
Taleo	1C50=L30-9-P/4N-OB
Taleo	1C50=R30-4-P/4N-OB
Taleo	1C50=R30-5-P/4N-OB
Taleo	1C50=R30-6-P/4N-OB
Taleo	1C50=R30-7-P/4N-OB
Taleo	1C50=R30-8-P/4N-OB
Taleo	1C50=R30-9-P/4N-OB
Taleo	1C50=L22-1-P/4S-OB
Taleo	1C50=L22-2-P/4S-OB
Taleo	1C50=L22-3-P/4S-OB
Taleo	1C50=L22-4-P/4S-OB
Taleo	1C50=L22-5-P/4S-OB
Taleo	1C50=R22-1-P/4S-OB
Taleo	1C50=R22-2-P/4S-OB
Taleo	1C50=R22-3-P/4S-OB
Taleo	1C50=R22-4-P/4S-OB
Taleo	1C50=R22-5-P/4S-OB

Taleo	1C50=L23-1-P/4S-OB	
Taleo	1C50=L23-2-P/4S-OB	
Taleo	1C50=L23-3-P/4S-OB	
Taleo	1C50=L23-4-P/4S-OB	
Taleo	1C50=L23-5-P/4S-OB	
Taleo	1C50=L23-6-P/4S-OB	
Taleo	1C50=R23-1-P/4S-OB	
Taleo	1C50=R23-2-P/4S-OB	
Taleo	1C50=R23-3-P/4S-OB	
Taleo	1C50=R23-4-P/4S-OB	
Taleo	1C50=R23-5-P/4S-OB	
Taleo	1C50=R23-6-P/4S-OB	
Taleo	1C50=L29-4-P/15N-OB	
Taleo	1C50=L29-5-P/15N-OB	
Taleo	1C50=L29-6-P/15N-OB	
Taleo	1C50=L29-7-P/15N-OB	
Taleo	1C50=L29-8-P/15N-OB	
Taleo	1C50=L29-9-P/15N-OB	
Taleo	1C50=R29-4-P/15N-OB	
Taleo	1C50=R29-5-P/15N-OB	
Taleo	1C50=R29-6-P/15N-OB	
Taleo	1C50=R29-7-P/15N-OB	
Taleo	1C50=R29-8-P/15N-OB	
Taleo	1C50=R29-9-P/15N-OB	
Taleo	1C50=L30-4-P/15N-OB	
Taleo	1C50=L30-5-P/15N-OB	
Taleo	1C50=L30-6-P/15N-OB	
Taleo	1C50=L30-7-P/15N-OB	
Taleo	1C50=L30-8-P/15N-OB	
Taleo	1C50=L30-9-P/15N-OB	
Taleo	1C50=R30-4-P/15N-OB	
Taleo	1C50=R30-5-P/15N-OB	
Taleo	1C50=R30-6-P/15N-OB	
Taleo	1C50=R30-7-P/15N-OB	
Taleo	1C50=R30-8-P/15N-OB	
Taleo	1C50=R30-9-P/15N-OB	
Taleo	1C50=L22-1-P/15S-OB	
Taleo	1C50=L22-2-P/15S-OB	
Taleo	1C50=L22-3-P/15S-OB	
Taleo	1C50=L22-4-P/15S-OB	
Taleo	1C50=L22-5-P/15S-OB	
Taleo	1C50=R22-1-P/15S-OB	
Taleo	1C50=R22-2-P/15S-OB	
Taleo	1C50=R22-3-P/15S-OB	
Taleo	1C50=R22-4-P/15S-OB	
Taleo	1C50=R22-5-P/15S-OB	

ottobock.

25/2022 .862		ottobo
Taleo	1C50=L23-1-P/15S-OB	
Taleo	1C50=L23-2-P/15S-OB	
Taleo	1C50=L23-3-P/15S-OB	
Taleo	1C50=L23-4-P/15S-OB	
Taleo	1C50=L23-5-P/15S-OB	
Taleo	1C50=L23-6-P/15S-OB	
Taleo	1C50=R23-1-P/15S-OB	
Taleo	1C50=R23-2-P/15S-OB	
Taleo	1C50=R23-3-P/15S-OB	
Taleo	1C50=R23-4-P/15S-OB	
Taleo	1C50=R23-5-P/15S-OB	
Taleo	1C50=R23-6-P/15S-OB	
Taleo service foot	1C50=L22-1-P/0-S	
Taleo service foot	1C50=L22-2-P/0-S	
Taleo service foot	1C50=L22-3-P/0-S	
Taleo service foot	1C50=L22-4-P/0-S	
Taleo service foot	1C50=L22-5-P/0-S	
Taleo service foot	1C50=L23-1-P/0-S	
Taleo service foot	1C50=L23-2-P/0-S	
Taleo service foot	1C50=L23-3-P/0-S	
Taleo service foot	1C50=L23-4-P/0-S	
Taleo service foot	1C50=L23-5-P/0-S	
Taleo service foot	1C50=L23-6-P/0-S	
Taleo service foot	1C50=L24-1-P/0-S	
Taleo service foot	1C50=L24-2-P/0-S	
Taleo service foot	1C50=L24-3-P/0-S	
Taleo service foot	1C50=L24-4-P/0-S	
Taleo service foot	1C50=L24-5-P/0-S	
Taleo service foot	1C50=L24-6-P/0-S	
Taleo service foot	1C50=L25-1-P/0-S	
Taleo service foot	1C50=L25-2-P/0-S	
Taleo service foot	1C50=L25-3-P/0-S	
Taleo service foot	1C50=L25-4-P/0-S	
Taleo service foot	1C50=L25-5-P/0-S	
Taleo service foot	1C50=L25-6-P/0-S	
Taleo service foot	1C50=L25-7-P/0-S	
Taleo service foot	1C50=L25-8-P/0-S	
Taleo service foot	1C50=L26-1-P/0-S	
Taleo service foot	1C50=L26-2-P/0-S	
Taleo service foot	1C50=L26-3-P/0-S	
Taleo service foot	1C50=L26-4-P/0-S	
Taleo service foot	1C50=L26-5-P/0-S	
Taleo service foot	1C50=L26-6-P/0-S	
Taleo service foot	1C50=L26-7-P/0-S	
Taleo service foot	1C50=L26-8-P/0-S	
Taleo service foot	1C50=L27-3-P/0-S	

٦J	
eleas	
ed b	
y Doo	
Con	
itrol 5	
5-25-	
2022	

Taleo service foot 1C50=L27-4-P/0-S Taleo service foot 1C50=L27-5-P/0-S Taleo service foot 1C50=L27-6-P/0-S Taleo service foot 1C50=L27-6-P/0-S Taleo service foot 1C50=L27-7-P/0-S Taleo service foot 1C50=L27-8-P/0-S Taleo service foot 1C50=L28-8-P/0-S Taleo service foot 1C50=L28-3-P/0-S Taleo service foot 1C50=L28-4-P/0-S Taleo service foot 1C50=L28-4-P/0-S Taleo service foot 1C50=L28-6-P/0-S Taleo service foot 1C50=L28-6-P/0-S Taleo service foot 1C50=L28-8-P/0-S Taleo service foot 1C50=L28-8-P/0-S Taleo service foot 1C50=L28-8-P/0-S Taleo service foot 1C50=L29-4-P/0-S Taleo service foot 1C50=L29-4-P/0-S Taleo service foot 1C50=L29-4-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L30-5-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo servic	1862		
Taleo service foot 1C50=L27-6-P/0-S Taleo service foot 1C50=L27-8-P/0-S Taleo service foot 1C50=L27-8-P/0-S Taleo service foot 1C50=L28-8-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R24-1-P/0-S	Taleo service foot	1C50=L27-4-P/0-S	
Taleo service foot 1C50=L27-7-P/o-S Taleo service foot 1C50=L27-8-P/o-S Taleo service foot 1C50=L28-3-P/o-S Taleo service foot 1C50=L28-3-P/o-S Taleo service foot 1C50=L28-4-P/o-S Taleo service foot 1C50=L28-5-P/o-S Taleo service foot 1C50=L28-5-P/o-S Taleo service foot 1C50=L28-8-P/o-S Taleo service foot 1C50=L28-8-P/o-S Taleo service foot 1C50=L28-9-P/o-S Taleo service foot 1C50=L29-8-P/o-S Taleo service foot 1C50=L30-4-P/o Taleo service foot 1C50=L30-8-P/o Taleo service foot 1C50=R22-1-P/o-S Taleo service foot 1C50=R23-1-P/o-S Taleo service foot 1C50=R24-1-P/o-S Taleo se	Taleo service foot	1C50=L27-5-P/0-S	
Taleo service foot 1C50=L27-8-P/0-S Taleo service foot 1C50=L27-9-P/0-S Taleo service foot 1C50=L28-3-P/0-S Taleo service foot 1C50=L28-4-P/0-S Taleo service foot 1C50=L28-4-P/0-S Taleo service foot 1C50=L28-6-P/0-S Taleo service foot 1C50=L28-8-P/0-S Taleo service foot 1C50=L28-8-P/0-S Taleo service foot 1C50=L28-9-P/0-S Taleo service foot 1C50=L28-9-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L30-4-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo	Taleo service foot	1C50=L27-6-P/0-S	
Taleo service foot 1C50=L27-9-P/0-S Taleo service foot 1C50=L28-3-P/0-S Taleo service foot 1C50=L28-4-P/0-S Taleo service foot 1C50=L28-5-P/0-S Taleo service foot 1C50=L28-6-P/0-S Taleo service foot 1C50=L28-6-P/0-S Taleo service foot 1C50=L28-9-P/0-S Taleo service foot 1C50=L28-9-P/0-S Taleo service foot 1C50=L28-9-P/0-S Taleo service foot 1C50=L29-4-P/0-S Taleo service foot 1C50=L29-4-P/0-S Taleo service foot 1C50=L29-1-P/0-S Taleo service foot 1C50=L30-1-P/0 Taleo service foot 1C50=L30-1-P/0-S Taleo service foot 1C50=L30-1-P/0-S Taleo service foot 1C50=L30-1-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R24-1-P/0-S	Taleo service foot	1C50=L27-7-P/0-S	
Taleo service foot 1C50=L27-9-P/0-S Taleo service foot 1C50=L28-3-P/0-S Taleo service foot 1C50=L28-3-P/0-S Taleo service foot 1C50=L28-5-P/0-S Taleo service foot 1C50=L28-6-P/0-S Taleo service foot 1C50=L28-6-P/0-S Taleo service foot 1C50=L28-8-P/0-S Taleo service foot 1C50=L28-9-P/0-S Taleo service foot 1C50=L28-9-P/0-S Taleo service foot 1C50=L29-4-P/0-S Taleo service foot 1C50=L29-6-P/0-S Taleo service foot 1C50=L29-6-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L30-4-P/0 Taleo service foot 1C50=L30-4-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S	The second secon	1C50=L27-8-P/0-S	
Taleo service foot 1C50=L28-3-P/0-S Taleo service foot 1C50=L28-4-P/0-S Taleo service foot 1C50=L28-6-P/0-S Taleo service foot 1C50=L28-6-P/0-S Taleo service foot 1C50=L28-7-P/0-S Taleo service foot 1C50=L28-8-P/0-S Taleo service foot 1C50=L28-9-P/0-S Taleo service foot 1C50=L28-9-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-6-P/0-S Taleo service foot 1C50=L29-6-P/0-S Taleo service foot 1C50=L29-7-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L30-3-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S	N 1994 D 4 7 H 36 D4354 N 4 D		
Taleo service foot 1C50=L28-4-P/0-S Taleo service foot 1C50=L28-5-P/0-S Taleo service foot 1C50=L28-6-P/0-S Taleo service foot 1C50=L28-8-P/0-S Taleo service foot 1C50=L28-8-P/0-S Taleo service foot 1C50=L28-9-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R23-2-P/0-S Taleo service foot 1C50=R23-2-P/0-S Taleo service foot 1C50=R23-2-P/0-S Taleo service foot 1C50=R23-2-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-8-P/0-S Taleo service foot 1C50=R24-1-P/0-S			
Taleo service foot 1C50=L28-5-P/0-S Taleo service foot 1C50=L28-7-P/0-S Taleo service foot 1C50=L28-P/0-S Taleo service foot 1C50=L28-P/0-S Taleo service foot 1C50=L28-P/0-S Taleo service foot 1C50=L29-4-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-P/0-S Taleo service foot 1C50=L29-P/0-S Taleo service foot 1C50=L29-P/0-S Taleo service foot 1C50=L29-P/0-S Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-2-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R24-1-P/0-S			
Taleo service foot 1C50=L28-6-P/0-S Taleo service foot 1C50=L28-P/0-S Taleo service foot 1C50=L28-P/0-S Taleo service foot 1C50=L28-P/0-S Taleo service foot 1C50=L29-P/0-S Taleo service foot 1C50=L30-P/0-S Taleo service foot 1C50=L30-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-P/0-S Taleo service foot 1C50=R22-P/0-S Taleo service foot 1C50=R22-P/0-S Taleo service foot 1C50=R23-P/0-S Taleo service foot 1C50=R24-P/0-S			
Taleo service foot 1C50=L28-7-P/0-S Taleo service foot 1C50=L28-8-P/0-S Taleo service foot 1C50=L28-9-P/0-S Taleo service foot 1C50=L29-4-P/0-S Taleo service foot 1C50=L29-4-P/0-S Taleo service foot 1C50=L29-5-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L30-4-P/0 Taleo service foot 1C50=L30-4-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-2-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-5-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S	2 (Sec. Astron.) 181 (182 (September 181 (September		
Taleo service foot 1C50=L28-8-P/0-S Taleo service foot 1C50=L28-9-P/0-S Taleo service foot 1C50=L29-4-P/0-S Taleo service foot 1C50=L29-5-P/0-S Taleo service foot 1C50=L29-6-P/0-S Taleo service foot 1C50=L29-7-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L30-4-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-7-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-5-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S			
Taleo service foot 1C50=L28-9-P/0-S Taleo service foot 1C50=L29-4-P/0-S Taleo service foot 1C50=L29-5-P/0-S Taleo service foot 1C50=L29-6-P/0-S Taleo service foot 1C50=L29-6-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L30-4-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-4-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R24-1-P/0-S			
Taleo service foot 1C50=L29-4-P/0-S Taleo service foot 1C50=L29-5-P/0-S Taleo service foot 1C50=L29-6-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L30-4-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-4-P/0-S Taleo service foot 1C50=R22-4-P/0-S Taleo service foot 1C50=R22-4-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-5-P/0-S Taleo service foot 1C50=R24-1-P/0-S			
Taleo service foot 1C50=L29-5-P/0-S Taleo service foot 1C50=L29-6-P/0-S Taleo service foot 1C50=L29-7-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L39-9-P/0-S Taleo service foot 1C50=L30-4-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-7-P/0 Taleo service foot 1C50=L30-7-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R24-1-P/0-S			
Taleo service foot 1C50=L29-6-P/0-S Taleo service foot 1C50=L29-7-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L30-4-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-7-P/0 Taleo service foot 1C50=L30-7-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S			
Taleo service foot 1C50=L29-7-P/0-S Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L30-4-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=R20-8-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-4-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R24-1-P/0-S			
Taleo service foot 1C50=L29-8-P/0-S Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L30-4-P/0 Taleo service foot 1C50=L30-5-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=L29-9-P/0-S Taleo service foot 1C50=L30-4-P/0 Taleo service foot 1C50=L30-5-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-7-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-4-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S			
Taleo service foot 1C50=L30-4-P/0 Taleo service foot 1C50=L30-5-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-7-P/0 Taleo service foot 1C50=L30-7-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S			
Taleo service foot 1C50=L30-5-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-2-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S	0 1800000 POUR NO 180000 POUR NO 18000 POUR		
Taleo service foot 1C50=L30-6-P/0 Taleo service foot 1C50=L30-7-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-4-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-2-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-2-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S <			
Taleo service foot 1C50=L30-7-P/0 Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-2-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-4-P/0-S Taleo service foot 1C50=R22-5-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-2-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=L30-8-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-2-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-4-P/0-S Taleo service foot 1C50=R22-5-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-2-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=L30-9-P/0 Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-4-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-5-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R22-2-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-4-P/0-S Taleo service foot 1C50=R22-1-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-2-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=R22-2-P/0-S Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-4-P/0-S Taleo service foot 1C50=R22-5-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-2-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-2-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S	A SOURCE CONTROL OF CO		
Taleo service foot 1C50=R22-3-P/0-S Taleo service foot 1C50=R22-4-P/0-S Taleo service foot 1C50=R22-5-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-2-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-5-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-2-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=R22-4-P/0-S Taleo service foot 1C50=R22-5-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-2-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-2-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S	A SERVICE OF THE PARTY OF THE P		
Taleo service foot 1C50=R22-5-P/0-S Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-2-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-2-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=R23-1-P/0-S Taleo service foot 1C50=R23-2-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-5-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=R23-2-P/0-S Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-5-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-2-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=R23-3-P/0-S Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-5-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-2-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=R23-4-P/0-S Taleo service foot 1C50=R23-5-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-2-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=R23-5-P/0-S Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-2-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=R23-6-P/0-S Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-2-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=R24-1-P/0-S Taleo service foot 1C50=R24-2-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=R24-2-P/0-S Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=R24-3-P/0-S Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=R24-4-P/0-S Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S	61 59-300 40 107 - Sid Bankel 11 10/47 - Ca. 10 1961 61 1000		
Taleo service foot 1C50=R24-5-P/0-S Taleo service foot 1C50=R24-6-P/0-S			
Taleo service foot 1C50=R24-6-P/0-S	A SHARES AND THE STATE OF STAT		
Taleo service foot 1C50=R25-1-P/0-S	10 minutes and the second of t		
Taleo service foot 1C50=R25-2-P/0-S			
Taleo service foot 1C50=R25-3-P/0-S			
Taleo service foot 1C50=R25-4-P/0-S	Taleo service foot	1C50=R25-4-P/0-S	

Date: 5/25/2022 Rev: 1 ECO-01862

ottobock.

71002		
Taleo service foot	1C50=R25-5-P/0-S	
Taleo service foot	1C50=R25-6-P/0-S	
Taleo service foot	1C50=R25-7-P/0-S	
Taleo service foot	1C50=R25-8-P/0-S	
Taleo service foot	1C50=R26-1-P/0-S	
Taleo service foot	1C50=R26-2-P/0-S	
Taleo service foot	1C50=R26-3-P/0-S	
Taleo service foot	1C50=R26-4-P/0-S	
Taleo service foot	1C50=R26-5-P/0-S	
Taleo service foot	1C50=R26-6-P/0-S	
Taleo service foot	1C50=R26-7-P/0-S	
Taleo service foot	1C50=R26-8-P/0-S	
Taleo service foot	1C50=R27-3-P/0-S	
Taleo service foot	1C50=R27-4-P/0-S	×.
Taleo service foot	1C50=R27-5-P/0-S	
Taleo service foot	1C50=R27-6-P/0-S	
Taleo service foot	1C50=R27-7-P/0-S	
Taleo service foot	1C50=R27-8-P/0-S	
Taleo service foot	1C50=R27-9-P/0-S	
Taleo service foot	1C50=R28-3-P/0-S	
Taleo service foot	1C50=R28-4-P/0-S	
Taleo service foot	1C50=R28-5-P/0-S	
Taleo service foot	1C50=R28-6-P/0-S	
Taleo service foot	1C50=R28-7-P/0-S	
Taleo service foot	1C50=R28-8-P/0-S	
Taleo service foot	1C50=R28-9-P/0-S	
Taleo service foot	1C50=R29-4-P/0-S	
Taleo service foot	1C50=R29-5-P/0-S	
Taleo service foot	1C50=R29-6-P/0-S	
Taleo service foot	1C50=R29-7-P/0-S	
Taleo service foot	1C50=R29-8-P/0-S	
Taleo service foot	1C50=R29-9-P/0-S	
Taleo Footshell	2C15=L22/15S	
Taleo Footshell	2C15=L22/4S	
Taleo Footshell	2C15=L23/15S	
Taleo Footshell	2C15=L23/4S	
Taleo Footshell	2C15=L24/15N	
Taleo Footshell	2C15=L24/15S	
Taleo Footshell	2C15=L24/4N	
Taleo Footshell	2C15=L24/4S	
Taleo Footshell	2C15=L25/15N	
Taleo Footshell	2C15=L25/15S	
Taleo Footshell	2C15=L25/4N	
Taleo Footshell	2C15=L25/4S	
Taleo Footshell	2C15=L26/15N	
Taleo Footshell	2C15=L26/4N	

Taleo Footshell	2C15=L27/15N
Taleo Footshell	2C15=L27/4N
Taleo Footshell	2C15=L28/15N
Taleo Footshell	2C15=L28/4N
Taleo Footshell	2C15=L29/15N
Taleo Footshell	2C15=L29/4N
Taleo Footshell	2C15=L30/15N
Taleo Footshell	2C15=L30/4N
Taleo Footshell	2C15=R22/15S
Taleo Footshell	2C15=R22/4S
Taleo Footshell	2C15=R23/15S
Taleo Footshell	2C15=R23/4S
Taleo Footshell	2C15=R24/15N
Taleo Footshell	2C15=R24/15S
Taleo Footshell	2C15=R24/4N
Taleo Footshell	2C15=R24/4S
Taleo Footshell	2C15=R25/15N
Taleo Footshell	2C15=R25/15S
Taleo Footshell	2C15=R25/4N
Taleo Footshell	2C15=R25/4S
Taleo Footshell	2C15=R26/15N
Taleo Footshell	2C15=R26/4N
Taleo Footshell	2C15=R27/15N
Taleo Footshell	2C15=R27/4N
Taleo Footshell	2C15=R28/15N
Taleo Footshell	2C15=R28/4N
Taleo Footshell	2C15=R29/15N
Taleo Footshell	2C15=R29/4N
Taleo Footshell	2C15=R30/15N
Taleo Footshell	2C15=R30/4N

is in conformity with the relevant provisions of below-mentioned EC Regulation(s), EC Directive(s) and Common Specification(s).

2017/745 EU Regulation of the European Parliament and of the Council on medical devices

The conformity is declared based on Article 52(7), Annex II and III of the Regulation (EU) 2017/745.

Document reference number: REG-00134

Date: 5/25/2022 Rev: 1 ECO-01862

ottobock.

5/25/2022 Date

Salt Lake City, Utah USA

Wall 5/25/

COO North America

Caleb Beck

Director, Regulatory & Quality Compliance, North America